

Bubble Mattress BM-100



The Alternating Pressure Mattress consists of two parts: the mattress and the pump. The pump utilizes a small compressor to remain quiet and energy efficient. The control panel is simple and very user-friendly. The mattress relieves pressure by sequentially deflating and inflating alternate air cells on approximately 12 minutes timed intervals. It is widely recognized that constant pressure to a bony prominence is the leading cause of skin breakdown. The continuous movement supplied by the unit lessens the areas of constant pressure and enhances circulation.

Operation:

- Place the mattress on the bed frame with the hose end at the foot section of the bed frame.
- Using the integrated hooks, securely hang the pump on the bed end at the foot end or place on a smooth flat surface.
- 3. Connect the air hoses from the mattress to the pump.
- 4. Plug the pump into a wall outlet. Be sure the power cord is safely away from possible hazards.
- 5. Turn on the power switch on the control panel of the pump. The pump will begin to inflate the mattress.
- 6. After inflation, adjust the mattress using the dial on the pump.

Product Specifications

WEIGHT OF BROBLIOT	
WEIGHT OF PRODUCT	
MATTRESS WEIGHT:	10 lbs (4.5kg)
PUMP WEIGHT:	3 lbs (1.4 kg)
WEIGHT CAPACITY	
MAXIMUM PATIENT WEIGHT:	298 lbs (135 kg)
W D CHINICIA I TATILLA I T	200 100 (100 1(g)
ELECTRICAL	
OPERATING POWER:	~220V 50Hz, 0.1AMAX
FUSES:	T1A 250V
ENVIRONMENTAL CONDITIONS	
OPERATING CONDITIONS	
Ambient Temperature:	10°C to 40°C
Dalatica Hermidit	(50°F to 104°F)
Relative Humidity: STORAGE AND SHIPPING CONDITIONS	10% to 75%
Ambient Temperature:	-18°C to +43°C
Ambient remperature.	(0°F to 110°F)
Relative Humidity:	10% to 95%

Address: 3 Shenton Way #16-08 Shenton House Singapore 068805 Email: international@omega-h-c.com WWW.omega-h-c.com